



# ARE DT1 LF

## Installation Guide

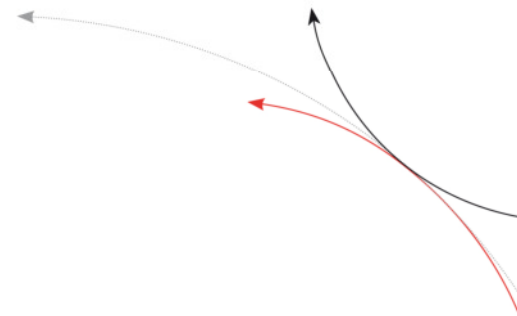



<b>1</b>	<b>INTRODUCTION .....</b>	<b>4</b>
<b>2</b>	<b>STARTUP AND TESTING THE READER .....</b>	<b>5</b>
<b>3</b>	<b>AEG ID INSTRUCTION SET .....</b>	<b>5</b>
<b>3.1</b>	<b>General .....</b>	<b>5</b>
3.1.1	Entering instructions .....	6
3.1.2	Output format .....	6
3.1.2.1	Instruction specific output .....	6
3.1.2.2	Output after changing a parameter .....	6
3.1.2.3	Output at parameter query .....	7
3.1.3	Blank instuction .....	7
3.1.4	Incorrect instruction / error codes .....	7
3.1.5	Upper and lower case .....	8
3.1.6	Linefeed .....	8
<b>3.2</b>	<b>Instructions for the hardware settings .....</b>	<b>9</b>
3.2.1	BD – baudrate .....	9
3.2.2	EC – Echo .....	9
3.2.3	LED – LED control .....	10
3.2.4	RST – reset .....	10
3.2.5	VER – version .....	10
3.2.6	HF – Antenna field .....	11
3.2.7	HID – human interface device/keyboard .....	11
3.2.8	KL – keyboard language .....	13
<b>3.3</b>	<b>Instructions for reading settings .....</b>	<b>14</b>
3.3.1	CID – suppression of ID Codes .....	14
3.3.2	CN – suppression of No Reads .....	15
3.3.3	NID – Failure Protection .....	16
3.3.4	INIT – initialization .....	17
3.3.5	LAA – LED automatic activity .....	17
3.3.6	TSC – time show code .....	18
3.3.7	TOR – maximum reading time .....	18
3.3.8	VSAVE – variables save .....	19
3.3.9	VS – variables show .....	19
3.3.10	ALGO – algorithm selection .....	20
3.3.11	VH – filter tracing .....	20
<b>3.4</b>	<b>General reading instructions .....</b>	<b>21</b>
3.4.1	GT – get tag .....	21
3.4.2	MD – mode of operation .....	21
3.4.3	Basic data exchange process .....	21
3.4.4	RD – read page .....	22
3.4.5	WD – write page .....	23

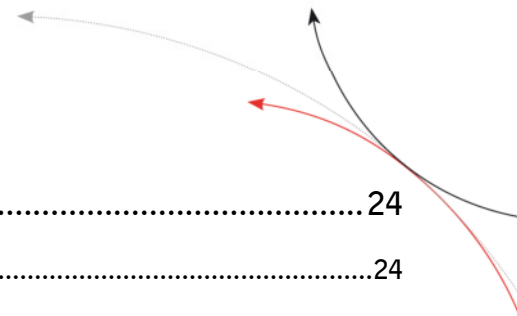

4	OPERATING MODES OF THE READER .....	24
4.1	MD 2 - triggered by an software command .....	24
4.2	MD 0 - continuous reading .....	25
5	INSTRUCTIONS .....	26
6	FCC INFORMATION .....	27
7	HOTLINE .....	28
8	REVISIONS .....	28

## 1 Introduction

This document describes the RFID-reading device ARE DT1 LF and the set-up procedure.

The main features of the reader are listed below:

- integrated USB interface selectable either communications port (similar RS232) or HID
- USB powered (no external supply voltage necessary)
- compact design

## 2 Startup and testing the reader

- Connect the reader with the USB interface from your notebook or pc
- The reader is supplied via the USB interface. The supply differs depending on the used port. To reach the maximal reading distance a powerfull supply is essential. A USB hub with its own power supply can deliver this.
- In the device manager there will appear a new device (AEG ID Communications Port)
- In the brackets you see the port number of the device (e.g. COM5)
- Open the "Demo Terminal" on the CD
- Open the menu "Settings"
- You have to set the following settings: baud rate 19200 baud, 8 data bits, no parity, 1 stop bit, , no flow control.
- Send the command „VER <CR>“ to the reader. The reader answers with the actual firmware version (e.g. AEG ID Multi-ISO V2.034).
- Send the command "MD <SP> 0 <CR>" to the reader. The reader sends No Read messages (XXXXXXXX), while there is no transponder in the antenna field available (if CN parameter ist 0). If there is a transponder present in the antenna field the reader sends its serial.

## 3 AEG ID instruction set

### 3.1 General

The command set described below defines the transfer of data on the serial interface.

The commands consist of a command code and optionally of a parameter value. Commands are terminated by the control character <CR> (0Dh). The control character serves as command line terminator.

Command codes and parameters, including all letters and numerical values, are principally transmitted as a sequence of ASCII characters (the value 255 (decimal) consequently as 32H, 35H, 35H; the command RST as 52H, 53H, 54H).

### 3.1.1 Entering instructions

The protocol format is as follows

**Command** <SP> parameter <CR>

The space character <SP> separates commands from parameters and the <CR> character acts as command line terminator.

For commands without parameter values (e.g. GT ) the <SP> character and parameter values are omitted. The command line is as short as this:

**Command** <CR>

### 3.1.2 Output format

Generally, every input terminated by <CR> is acknowledged by the reader. The following response protocols are different:

#### 3.1.2.1 Instruction specific output

After entering a valid command without a parameter value, the system answers by sending the parameter value and <CR>. Example:

**Command:** GT <CR>

**Output:** Transponder number or No Read <CR>

#### 3.1.2.2 Output after changing a parameter

After entering a valid command together with a parameter value, the system answers by sending the parameter value and <CR>. Example:

**Command:** MD <SP> 2 <CR>

**Output:** 2 <CR>

After entering an invalid parameter value, the system answers with the corresponding error code. Error message:

**Command:** MD <SP> 4 <CR>

**Output:** NAK <SP> #02 <CR>

### 3.1.2.3 Output at parameter query

Parameter settings can be queried by sending the command without adding a parameter value. Example:

Command: MD <CR>

Output: 2 <CR>

### 3.1.3 Blank instruction

If a single <CR> is input, the reader answers with a single <CR>. Example:

Command: <CR>

Output: <CR>

### 3.1.4 Incorrect instruction / error codes

If a command is not entered correctly, the reader sends one of the following error codes:

ERROR CODE	MEANING
NAK #00 <CR>	unknown command
NAK #02 <CR>	wrong parameter
NAK #10 <CR>	antenna failure
XXXXXXXX <CR>	no read
ACK	no error/acknowledge

### 3.1.5 Upper and lower case

The instruction set isn't case-sensitive.

### 3.1.6 Linefeed

The reader does never send a linefeed. If you use a terminal program it can add the linefeed. You have to choose the option "displace CR with CR LF".



## 3.2 Instructions for the hardware settings

### 3.2.1 BD – baudrate

The command BD enables the change of the baud rate. The settings are directly effective.

Input format: **BD** <SP> parameter <CR>

Output (example): **2** <CR>

Parameter:

PARAMETER	FUNCTION
0	4800 baud
1	9600 baud
2	19200 baud
3	38400 baud

### 3.2.2 EC – Echo

The EC command allows to change the echo function.

Input format: **EC** <SP> parameter <CR>

Parameter:

PARAMETER	FUNCTION
0	Echo off
1	Echo on

Output (example): **0** <CR>

### 3.2.3 LED – LED control

With the command LED you can control the LED ring of the ARE DT1.

Input format:               **LED <SP> parameter <CR>**

Output (example):       **1 <CR>**

Parameter:

<b>PARAMETER</b>	<b>FUNCTION</b>
0	off
1	on
2	Buzzer beeps, LEDs flash final state =initial state

### 3.2.4 RST – reset

With the command RST the reader does a warmstart and loads the saved settings from the internal EEPROM. The antenna field is off after the reset.

Input format:               **RST <CR>**

Output (example):       **ACK <CR>**

### 3.2.5 VER – version

With the command VER the reader sends the actual firmware version.

Input format:               **VER <CR>**

Output (example):       **AEG ID V1.22 <CR>**

### 3.2.6 HF – Antenna field

With the command HF, the antenna field can be set or reset manually.

Input format: **HF** <SP> parameter <CR>

Parameter:

PARAMETER	FUNCTION
0	Switch off antenna field (this stops automatic mode)
1	Switch on antenna field (this stops automatic mode)
2	Automaticmode, the antenne field is activated by reader to communicate with the transponder, afterwards it is switched off automatically. Therefore it is not compatible with the password mode.

The reader answers with the adopted antenna mode.

Input (example): **HF** <SP> 2 <CR>

Output: 2 <CR>

Note: The command is supported in A17 and A24 software version.

### 3.2.7 HID – human interface device/keyboard

The command switches the interface ether to HID or RS232 emulation.

Input format: **HID** <SP> parameter <CR>

Output (example): **0** <CR>

Parameter:

PARAMETER	FUNCTION
0	RS232 emulation, COM port
1	HID interface, keyboard

You have to unplug the device and plug the device in again to use the new setting. Don't forget to use the command VSAVE to save the new setting.

If the reader is in HID mode, you can not send any commands to the device. Because of that you have to use the Set-Up card – interface to switch the reader back from HID mode to serial interface mode.

1. Plug out the reader
2. Place card no reader
3. Plug in reader into USB-port
4. Wait for the beep tone from reader
5. Plug out reader
6. Remove card from reader
7. Plug in reader into USB port
8. Reader starts using the serial interface

The Set-Up card – interface is a EM4305 transponder with data content 0x31D6B82E on page 3, 0x0006008F on page 4 and the password 0x25F8AB6D.

### 3.2.8 KL – keyboard language

With the command KL you can configure the language of the keyboard in HID mode.

Input format:                    **KL** <SP> parameter <CR>

Output (example):            **07** <CR>

Parameter:

<b>PARAMETER</b>	<b>FUNCTION</b>
07	german
09	englisch
0A	spanish
0C	french
10	italien
13	dutch
16	portuguese
4B	canadian

### 3.3 Instructions for reading settings

#### 3.3.1 CID – suppression of ID Codes

In the MD0 mode with CID=1 **only the first** of in succession identical transponder numbers is output on the serial interface. The possibly following identical transponder numbers are suppressed, as long as no new valid transponder number is received, processed and output. The get tag command is not influenced by this command. NoReads do not influence the data filtering. The leds are not influenced by this command.

Input format: **CID** <SP> parameter <CR>

Output (example): **0** <CR>

Parameter:

PARAMETER	FUNCTION
0	No suppression
1	Suppression of equal transponder numbers

Example: A, B, C are different transponder codes, N is NoRead error code:

Sequence of reading cycles	Output sequence after filtering with CN=0 und CID=1	Output sequence after filtering with CN=1 und CID=1
N, N, .....,N, A, A, A, ....A, N,N, .....	N, N, .....,N, A, N, N, .....	A
N. N, N, A, A, A, N, A, A, B, A, C, C, C, .....	N. N, N, A, N, B, A, C, .....	A, B, A, C

The settings are directly effective.

Note: The internal reference number is deleted in the following conditions:

- after a cold start
- after a warm start (command line RST <CR>)
- after entering the command line CID <SP> 1 <CR>

This causes that the next transponder code is output definitely.

Note: The filter function CID picks up the results of the complete **reading cycles**, while the parameter NID proceeds from the results of single **readings!** The filter function CID has effect on the serial interface only.

### 3.3.2 CN – suppression of No Reads

Through the setting CN=1 the NoRead results after a get tag command or in MDO mode are suppressed on the serial interface. The leds are not influenced by this command.

Input format:                    **CN** <SP> parameter <CR>

Output (example):            **0** <CR>

Parameter:

PARAMETER	FUNCTION
0	No suppression
1	Suppression of equal transponder numbers

### 3.3.3 NID – Failure Protection

NID specifies the number of identical transponder numbers, which have to appear for the result “successful reading” within a reading cycle. In the setting NID = 1, two successive readings have to show the same transponder number.

Input format:                    **NID** <SP> parameter <CR>

Parameter:

PARAMETER	FUNCTION
0	One out of one
1	Two out of two

Output (example):            **1** <CR>

Sequence of readings	Length of the reading cycle	Result of the reading cycle
NoRead	1 reading	NoRead
0000125ED1, 0000125ED1	2 readings	0000125ED1
0000125ED1, 000012 <b>6</b> ED1	2 readings	NoRead



### 3.3.4 INIT – initialization

With the command INIT all parameters of this command set are set to the default values. After that you can save the settings with the command VSAVE.

Input format:                   **INIT <CR>**

Output (example):           **ACK <CR>**

### 3.3.5 LAA – LED automatic activity

The LEDs can be controlled by the reader or over the interface. You can set it up with the command LAA.

If the reading settings CN=1, CID=1, CE=1 (when SI=0), MD=0 and LAA=0 are set, the reader beeps and flashes after successful reading. This setting makes sense when the reader is used with HID setting.

Input format:                   **LAA <SP> parameter <CR>**

Output (example):           **0 <CR>**

Parameter:

<b>PARAMETER</b>	<b>FUNCTION</b>
0	controlled by reader
1	manual controlling

Note:                   If automatic LED control is active (LAA = 1), it delays processing the following command until switching the LED is over. If several reading or writing accesses to the transponder are planned, switch this function off (LAA = 0).

### 3.3.6 TSC – time show code

With the command TSC you can define the time in ms, after that the transpondercode is shown again, when the CID parameter is set to 1. If TSC is 00, the code is not shown a second time.

Input format: **TSC** <SP> parameter <CR>

Output (example): **00** <CR>

PARAMETER	FUNCTION
00	TSC is not active
01..63	TSC time in 200 ms steps (0.2 to 12.6s)

### 3.3.7 TOR – maximum reading time

TOR is the timeout time for the reader. TOR is used in operation mode 2 as maximum gating time for a reading process. The length of the maximum gating time results from the equation  $\text{gating\_time} = \text{TOR} * \text{TB}$ .

The time constant TB (time base) has always the default value 100ms.

Input format: **TOR** <SP> parameter <CR>

Output (example): **05** <CR>

Parameter:

PARAMETER	FUNCTION
00h	limits the reading process duration of exactly one reading cycle
01h..FFh	limits the reading process duration to maximum 1..256 times TB

### 3.3.8 VSAVE – variables save

With the command VSAVE the following parameters are saved to the internal EEPROM:

ACT, AFI<sup>2</sup>, AM, BD, CE<sup>1</sup>, CID, CN, KM<sup>1</sup>, KT<sup>1</sup>, LAA, MD, SI, TL<sup>1</sup>, TOR

Input format:                   **VSAVE <CR>**

Output (example):           **ACK <CR>**

<sup>1</sup> just available in the ISO 14443A standard

<sup>2</sup> just available in the ISO 15693 standard

### 3.3.9 VS – variables show

With the command VS the reader shows the settings of the following parameters:

BD, CID, CN, EC, MD, NID, TOR

Input format:                   **VS <CR>**

Output (example):           **BD <SP> 0 <SP>**

...

### 3.3.10 ALGO – algorithm selection

With the command ALGO the algorithm can be selected. Depending on the algorithm, the reader adapts its communication to the transponder suitable for the chip type respectively data format that shall be used. In some algorithms specific commands are provided additionally. For example the selective read and write commands (RD, WD) are only supported with read write transponders and its algorithms. This algorithm specific commands are listed in the "Addon\_A.." documents.

Which reading algorithms are available depends on the type of reader, not every reader type supports all types of transponders.

Input format: **ALGO**<SP>parameter<CR>

Output (example): **4**<CR>

Parameter:

PARAMETER	FUNCTION (CHIP, FORMAT)
4	ASK 64 Bit
5	ISO FDX
6	HiTag1 und HiTagS
14	EM 4569 und 4305

### 3.3.11 VH – filter tracing

The parameter VH is activating an automatical input filter tracing. It is switched on by default and should not be deactivated without reason.

Input format: **VH**<SP>parameter<CR>

Output (example): **1**<CR>

Parameter:

PARAMETER	FUNCTION
0	Off
1	On

### 3.4 General reading instructions

#### 3.4.1 GT – get tag

The instruction GT executes one reading and sends back the transponder code of a transponder or the No Read error code (e.g. „FFFFFFFF“ oder „XXXXXXXXXX“).

Input format:            **GT <CR>**

Output (example):      **0420212E5F <CR>**

#### 3.4.2 MD – mode of operation

There are two modes of operation available. It is possible, that the reader reads constantly or triggered by an instruction.

Input format:            **MD <SP> parameter <CR>**

Output (example):      **2 <CR>**

Parameter:

PARAMETER	FUNCTION
0	constant reading mode
2	single reading mode

#### 3.4.3 Basic data exchange process

The master has to send an software command to start an read or write process of the reader. After doing all the necessary work at the readers site, the result of the reading or writing process or an failure code is sent back to the master.

If there is used an read/write transponder, only the serial number of the transponder will be read if the basic read command „Get Tag“ („GT <CR>“) is applied.

The data exchange of the whole memory can only be done, if the reader is set to the Mode 2 („selective Read (RD)“ and „write (WD)“).

### 3.4.4 RD – read page

- Start the reader with the command RD plus parameters (plus <CR>). You can read out just one block (with one parameter) or several blocks (with two parameters, first and last block number).
- Wait for the answer
- Analyse the received answer: 8 characters plus <CR>. Allowed characters 0 to F. The NoRead code is set to („XXXXXXXX“).

The result of the reading process may also be seen at the LED's.

- LED L2 lit, if there was a successful read.
- LED L3 lit, if there was a No Read.

Example:     **RD <SP> 20 <CR>**             read block 20

**RD <SP> 16 <SP> 33 <CR>** read all blocks from 16 to 33

Allowed values (block numbers of the transponder IC):

ALGO 9 (1 kBit; P4150, P4450, P4550)	3 ... 33
ALGO 6 (2 kBit; Hitag 1)	16 ... 63
ALGO 14 (2, 4; kBitEM4305, EM4569)	5 ... 15

### 3.4.5 WD – write page

The memory of the transponder is organised in blocks, containing 32 bits. The data's of every single block must be changed separately.

- Start the reader with the command WD plus parameters ( plus <CR>). The sent parameter consists of the block address and writing data's (8 ASCII characters).

- Wait for the answer

- Analyse the received answer: 3 characters plus <CR>.

**ACK <CR>**                      Writing process was successful

**NAK <CR>**                      Writing process was not successful.

**NOT <CR>**                      The response of the transponder was not readable.

The result of the writing process may also seen at the LED's.

- LED L2 lit, if there was a successful write
- LED L3 lit, if there was no successful write.


Example:      **WD <SP> 20 <SP> < 0 1 2 7 A C D F > <CR>**      write to block 20

Allowed values (block numbers of the transponder IC):

ALGO 9 (1 kBit; P4150, P4450, P4550)                      3 ... 33

ALGO 6 (2 kBit; Hitag 1)                                      16 ... 63

ALGO 14 (2, 4; kBitEM4305, EM4569)                      5 ... 15

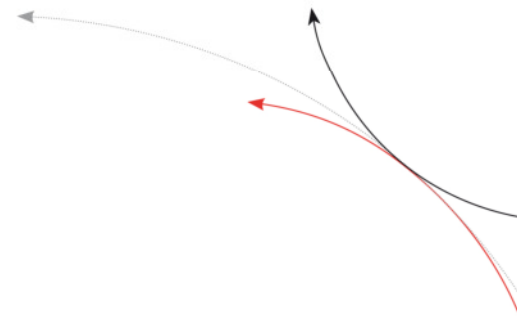

## 4 Operating modes of the reader

In the AEG instruction set there are two operational modes defined:

- MD 0 - continuous mode
- MD 2 - the reading process is triggered by the serial interface

In the next chapters you can find a detailed functional description.

The default mode is MD 2.

### 4.1 MD 2 - triggered by a software command

The master sends the command to read a transponder code. The reader answers with the code or an error code.

You can execute specific commands "Read" (RD) and "Write" (WD) just in mode MD2.

In operating mode 2, the exciter is always turned off. Triggered by the software command (GT; RD; WD), the exciter is activated. After successful reading or writing of a transponder number the exciter is turned off automatically.

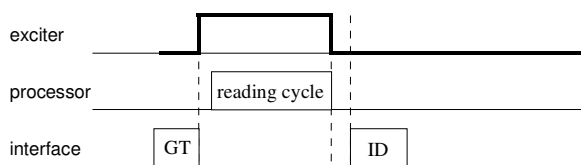


Figure 9: Software triggered reading operation

If the first reading cycle yields no result (NoRead), the on-time of the exciter is limited by the parameter TOR (time out reader): Reading cycles are continuously started until either a transponder is read successfully or the time span corresponding to the value of the parameter TOR has expired. The reader will not interrupt the last running readout cycle. If no transponder number has been read, a NoRead is output.



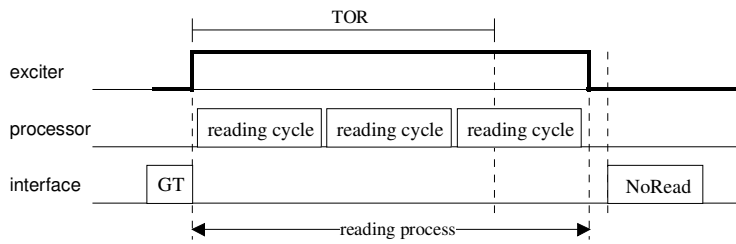


Figure 10: Software triggered reading operation with TOR>0

**Please note:** The TOR parameter is only active, if the GT-Command is applied. Within the time span defined by the value of TOR no NoRead will be output on the interface!

## 4.2 MD 0 - continuous reading

When operating continuously the exciter is switched on permanently. The reading cycles are initiated periodically.

After an accomplished reading cycle the reading information is evaluated. After that data (either transponder number or NoRead code) is output to the serial interface


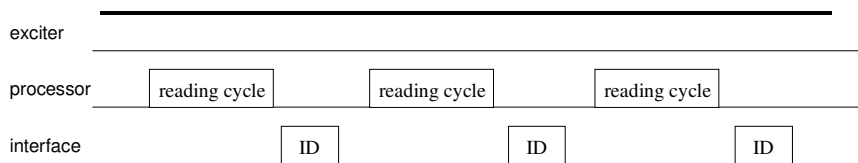


Figure 11: continuous operation

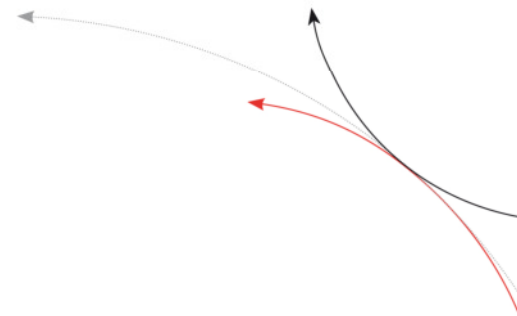


## 5 Instructions

To avoid any reduction of the reading distance of the reader, the reader must not be brought next to a metal surface (e.g. don't put metallic sticker to the reader). This could lead to a significant change of the properties of the antenna circuit, which in turn reduces the reading range considerably or causes reading holes!


To get reliable readings, the distance between reader and transponder must be within the specified reading volume.

The reading characteristic in front of the reader is not isotropic. It depends also strongly on the orientation between Reader and Transponder. To get the maximum reading distance, the orientation between reader and transponder must be well suited.

Optimum transponder orientation to ARE DT1

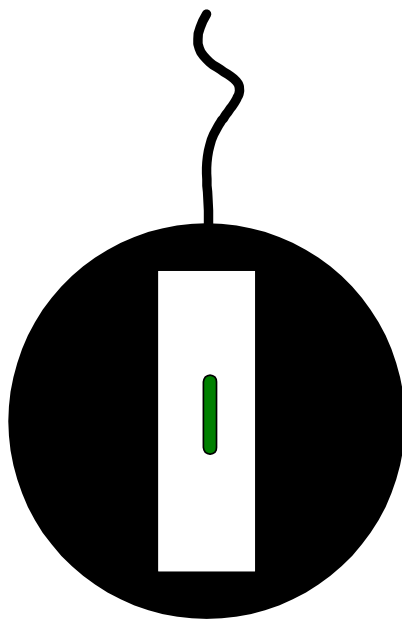

Optimum orientation of a glas tag  
to the ARE DT1 with ferrit  
antenna

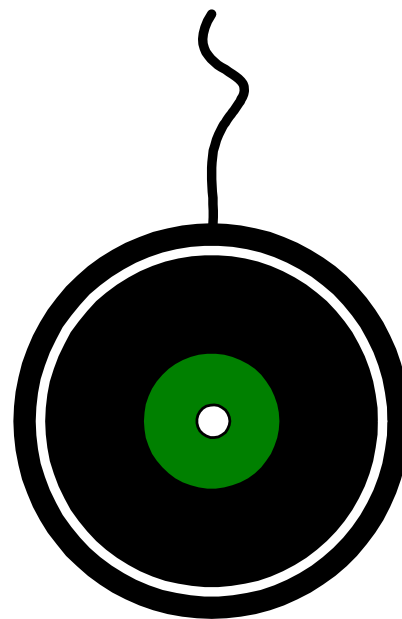

Optimum orientation of a disc tag to  
the ARE DT1 with air coil

To get a reliable readings or writings, the time of transponder while crossing the sensitive area of the antenna must be coordinated to the data transfer characteristics of transponder  
In general the time depends on the speed of the transponder, the size of the transponder and the way the transponder is mounted on the vehicle and must be verified by field tests.

Environmental electromagnetic noise may also reduce the read and write range considerably.

Arrangement to eliminate such troubles must be done specific to the application by the help of engineers of the manufacturer.

## 6 FCC Information

Name of Grantee	AEG Identifiaktionssysteme GmbH
Equipment Class	Part 15 Low Power Transmitter Below 1705 kHz
Notes	RFID Reader
FCC Rule Parts	15C

FCC IDENTIFIER	Frequency Range	Model	ID No.
V7IAREDT1LF-1	0.1342 – 0.1342 MHz	ARE DT1 – 17L / A / U / H	1004371
V7IUUDT100L	0.1342 – 0.1342 MHz	UDT-100L – 17L / UD / U / H / CS1	1005082

### Federal Communications Commissions (FCC) Statement

15.21

You are cautioned that changes or modifications not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.

15.105(b)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## 7 Hotline

If there are questions or suggestions please call the hotline:

Sales und Marketing: +49 (0)731-140088-0

Fax: +49 (0)731-140088-9000

e-mail: [sales@aegid.de](mailto:sales@aegid.de)

<http://www.aegid.de>

## 8 Revisions

01/11/13	Revision 00:	initial edition	
01/30/13	Revision 01:	chapter 3.3.9 „TSC time show code“ added chapter 3.6.9 „SF set flag“ added	
01/21/13	Revision 02:	adapt to LF	
11/20/13	Revision 03:	ALGO command	
09/18/14	Revision 04:	USB power supply	(MK)
09/23/15	Revision 05:	ALGO and reader-versions	(HL)
12/16/16	Revision 06:	Merge with A17 Version	(MK)
02/03/17	Revision 07:	FCC Information	(MK)
02/03/17	Revision 08:	TSC Command description corrected	(HL)
06/30/17	Revision 09:	Note LAA added	(HL)