



Set of Commands for ARE K1 / RS232

Inhalt


| | |
|--|-----------|
| 1 INTRODUCTION | 5 |
| 2 MODES OF OPERATING | 5 |
| 2.1 Change of Operating mode | 5 |
| 2.2 Operating mode 0 - continuous mode | 6 |
| 2.3 Operating mode 1 - running externally triggered..... | 6 |
| 2.4 Operating mode 2 - reading triggered by the serial interface | 8 |
| 3 PROTOCOL FORMAT | 8 |
| 3.1 Echo function..... | 8 |
| 3.2 Entering of commands..... | 9 |
| 3.3 Output format..... | 9 |
| 3.3.1 Command specific response..... | 9 |
| 3.3.2 Response to a parameter change | 9 |
| 3.3.3 Response to a parameter query | 10 |
| 3.4 Parameters..... | 10 |
| 3.4.1 Set of parameters..... | 10 |
| 3.5 Blank input line..... | 10 |
| 3.6 Erroneous entering of commands - error codes | 11 |
| 3.7 Boot message..... | 11 |
| 3.8 Use of capital letters..... | 11 |
| 3.9 Line feed | 11 |
| 3.10 Output format for the transponder number..... | 11 |
| 3.10.1 Output format for the NoRead information | 12 |
| 3.10.2 Output of a reader number | 12 |
| 4 COMMAND SET SPECIFICATION..... | 12 |
| 4.1 ALGO..... | 12 |
| 4.2 BD | 12 |
| 4.3 CID | 13 |
| 4.4 CN | 14 |

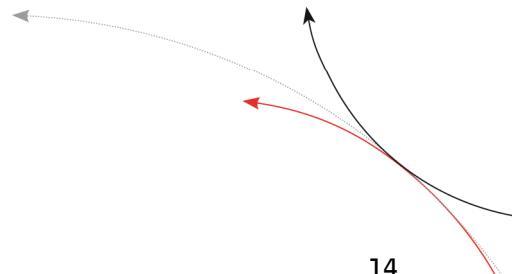

| | | |
|----------|---|-----------|
| 4.5 | DIAG | 14 |
| 4.6 | EC | 15 |
| 4.7 | GT | 15 |
| 4.8 | INIT | 15 |
| 4.9 | MD | 16 |
| 4.10 | NID | 16 |
| 4.11 | NRD | 17 |
| 4.12 | QRI | 17 |
| 4.13 | QN1 | 17 |
| 4.14 | RNR | 18 |
| 4.15 | RST | 18 |
| 4.16 | T0R | 18 |
| 4.17 | VER | 19 |
| 4.18 | VS | 19 |
| 4.19 | VSAVE | 19 |
| 5 | DESCRIPTION OF HARDWARE NEAR FUNCTIONS | 21 |
| 5.1 | Cold start | 21 |
| 5.2 | Interface to the master | 21 |
| 5.3 | Digital trigger input | 21 |
| 5.3.1 | Logical level | 21 |
| 5.3.2 | Timing characteristics | 21 |
| 5.4 | Digital trigger outputs | 21 |
| 5.4.1 | Logical level | 22 |
| 5.4.2 | Logical function | 22 |
| 5.5 | Indicating elements (LEDs) | 22 |
| 5.6 | DIP-switches | 22 |
| 6 | APPENDIX | 24 |
| 6.1 | Glossary | 24 |

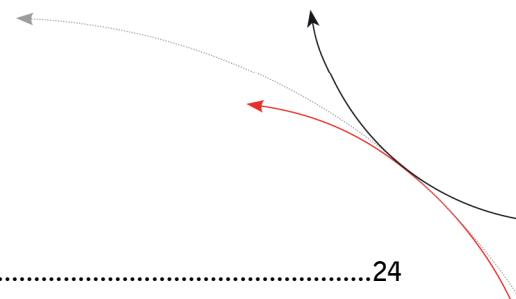

| | | |
|-----|---|----|
| 6.2 | list of control characters..... | 24 |
| 6.3 | List of error messages | 25 |
| 6.4 | List of system commands..... | 25 |
| 6.5 | List of parameters and default values | 25 |

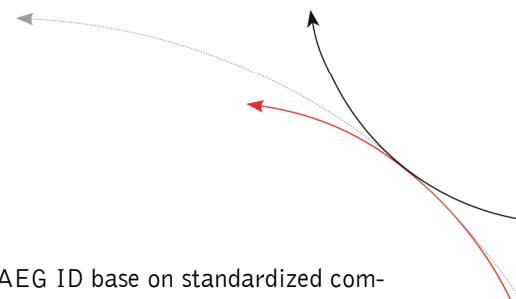

1 Introduction

The individual command set of a readers or decoders manufactured by AEG ID base on standardized command sets, that are specific to each class of readers/decoders. This standardized command sets are designated as ASB, which means AEG ID Standardized Command Set. The standardized command sets make it possible to use different hardware components (within a class of readers/decoders) without modification of the software application.

The command set of the ARE K1 is compatible to the ASB 1.0. Beyond it the ARE K1 RS232 is provided with a special command for self-diagnosis and extended parameter settings as well.

The difference between the command set of the ARE K1 and the ASB 1.0 is made quite clear at the relevant subjects in this description.

2 Modes of operating


Three basic modes of operating are defined:

- Operating mode 0 (continuous mode) - reader is automatically triggered
- Operating mode 1 (external mode) - reader is externally triggered
- Operating mode 2 (command mode) - reader is triggered by serial interface

2.1 Change of Operating mode

The operation mode of the ARE K1 can be changed out of each operation mode using the MD command¹.

¹ this behaviour is not universally applicable at ASB 1.0

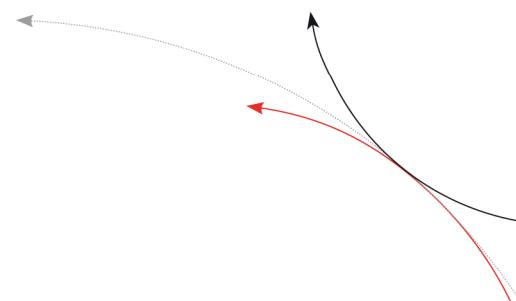

2.2 Operating mode 0 - continuous mode

When operating continuously the exciter is switched on permanently. The reading cycles are initiated periodically.

After an accomplished reading cycle the reading information is evaluated. After that data (either transponder number or NoRead code) is output to the serial interface.

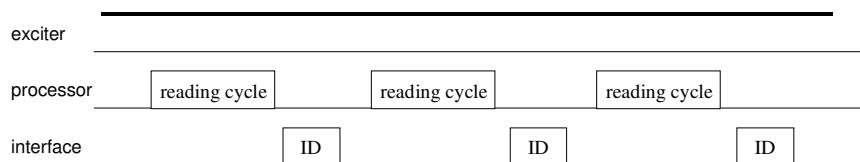


Figure 2.1: continuous operation

2.3 Operating mode 1 - running externally triggered

In operation mode 1 the exciter is turned off. As soon as the external triggered signal rises from logic 0 to 1, the exciter is started and a reading process is initiated.

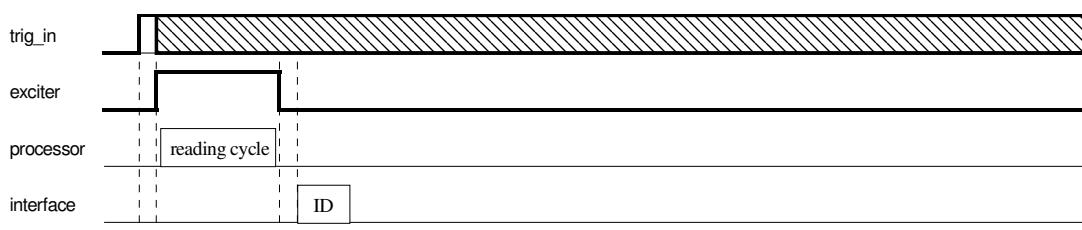


Figure 2.2: external triggering -limitation of the switch period through a successful reading

After a successful reading cycle, the exciter is turned off immediately (irrespective of the trigger signal). The next reading cycle starts at the next leading edge (0 to 1) of the trigger signal.

If a reading cycle is not successful, the reading process is controlled by the state of the external trigger signal: further reading cycles are started as long as either a successful cycle has occurred or the external trigger signal is logic 0 again. In the latter case the identification NoRead code is output.


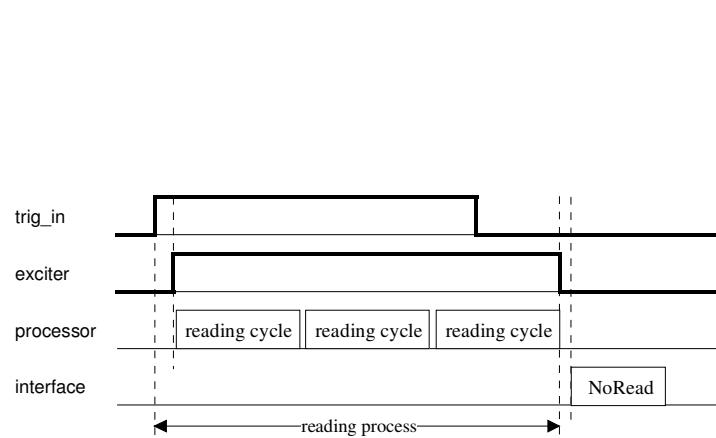


Figure 2.3: external triggering - limitation of the switch period through the Trig_In signal

Please note: In the course of the reading process no NoRead message will be output!

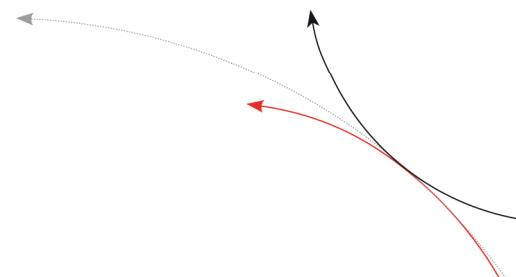

2.4 Operating mode 2 - reading triggered by the serial interface

In operating mode 2, the exciter is always turned off. Triggered by the command GT, the exciter is activated. After successful reading of a transponder number the exciter is turned off automatically.

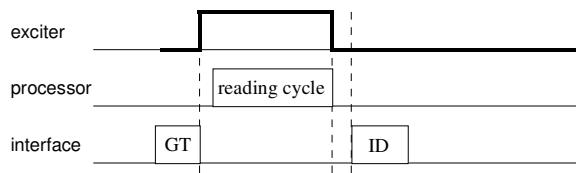


Figure 2.4: software triggered reading operation

If the first reading cycle yields no result (NoRead), the on-time of the exciter is limited by the parameter TOR (time out reader): Reading cycles are continuously started until either a transponder is read successfully or the time span corresponding to the value of the parameter TOR has expired. The reader will not interrupt the last running readout cycle. If no transponder number has been read, a NoRead is output.

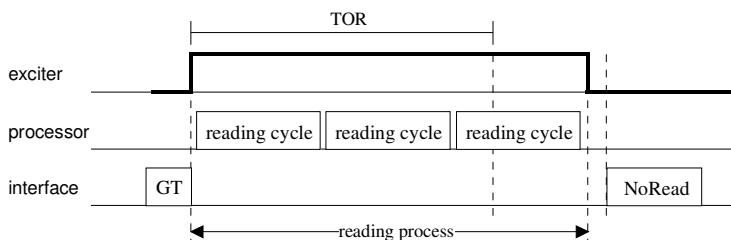


Figure 2.5: software triggered reading operation with $TOR > 0$

Please note: Within the time span defined by the value of TOR no NoRead will be output on the interface!

3 Protocol format


The command set described in this chapter defines the transfer of data on the serial interface.

The commands consist of a command code and of a parameter value optionally. Commands are terminated by the control character <CR> (13H). The control character terminates the command line.

Command codes and parameters, that means all letters and numerical values, are principally transmitted as a sequence of ASCII characters (the value 255 (decimal) consequently as 32H, 35H, 35H; the command RST as 52H, 53H, 54H).

3.1 Echo function

The echo function can be switched on or off.

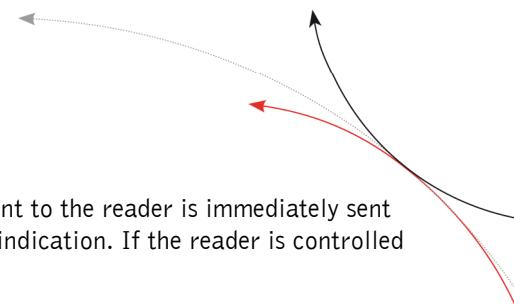

If the echo function is activated using the EC command, every signal sent to the reader is immediately sent back (echoed) after receipt. Thus the echo function can be used as life indication. If the reader is controlled by a terminal, the echo function should normally be activated.

If an echo function is not intended, e.g. in automation applications where the reader might be connected to an PLC, the echo function should be deactivated.

3.2 Entering of commands

The protocol format is as follows

command <SP> parameter <CR>

The space character <SP> separates the commands from the parameter value. The <CR> character terminates the command line.

For commands without parameter values (e.g. GT or RST) the <SP> character and parameter values are omitted. The command line is as short as this:

command <CR>.

3.3 Output format

Generally, every input terminated by <CR> is acknowledged by the reader. The following response protocols are different:

3.3.1 Command specific response

After a correct command without parameter value is sent to the reader, the reader answers using a format, which is specific for the submitted command. Example:

Command: GT <CR>

Output: transponder number <CR> or NoRead-code² <CR>


3.3.2 Response to a parameter change

After entering a valid command together with a parameter value, the system answers by sending the parameter value and <CR>. Example:

Command: MD <SP> 1 <CR>

Output: 1 <CR>

²see chapter 3.10.1

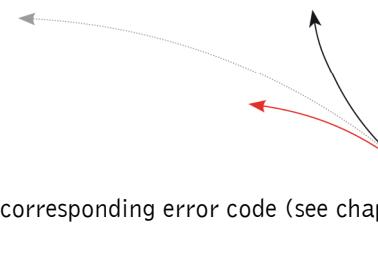

After entering an invalid parameter value, the system answers with the corresponding error code (see chapter 3.6).

3.3.3 Response to a parameter query

Parameter settings can be queried by sending the command without adding an parameter value. Example:

Command: MD <CR>

Output: 1 <CR>

3.4 Parameters

Generally a command comes with one parameter value at the most. Command code and paramter value are separated by SP>.

3.4.1 Set of parameters

The ARE K1 is provided with three independent sets of parameters:

- the set of parameters ex work
- the set of parameters specific to the application plus
- the actual set of parameters

The set of parameters ex work enclose all original reader settings. This set is stored in the EPROM and can't be changed. The set of parameters specific to the application is stored in an EEPROM. This set defines the configuration after a cold start. The actual set of parameters defines the actual function of the decoder. It is stored in the RAM.

All changes of the parameter values have an effekt to the actual set of parameters only. This set is temporary, that means all values are lost after switching off the decoder.


Using the VSAVE command (see chapter 4.19) the actual set can be stored permanently as set of parameters specific to the application. Then all values are loaded back automatically after a cold start.

3.5 Blank input line

If a single <CR> is input, the reader answers with a single <CR>. Example:

Command: <CR>

Output: <CR>

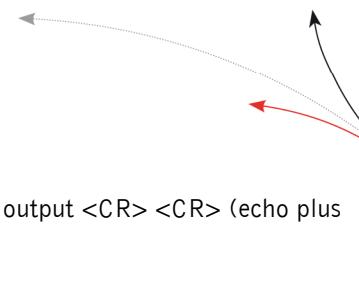

Please note: If echo mode is active, a single <CR> forces the reader to output <CR> <CR> (echo plus output).

3.6 Erroneous entering of commands - error codes

If a command is not entered correctly, the reader sends one of the following error codes:

Wrong command: <NAK> #00 <CR>

Wrong parameter: <NAK> #02 <CR>

3.7 Boot message

After booting the system (cold and warm start) the software version is output as described for the VER command (see chapter 4.17), if echo is active. If echo is disabled, no boot message will appear.

3.8 Use of capital letters

The standard operating system is not case-sensitive, that means capital- and small letters are treated the same.

3.9 Line feed

A line feed character <LF> is not sent by the decoder. If the decoder is controlled by a terminal, a line feed can be added by the terminal software (option: replace CR by CR LF at receipt).

3.10 Output format for the transponder number


The location of the transponder bits in the ASCII characters is shown in Table 3.1:

| D38 ... D32 | D31 ... D24 | D23 ... D16 | D15 ... D8 | D7 ... D0 |
|-------------|-------------|-------------|------------|-----------|
| ASC9 ASC8 | ASC7 ASC6 | ASC5 ASC4 | ASC3 ASC2 | ASC1 ASC0 |

Table 3.1: data format of the transponder number

| | | | | |
|-------------|---------------|-----------------|-----------------|-----------------|
| 0 0 0 0 0 0 | 0 0 0 1 1 1 1 | 0 0 1 1 0 1 1 1 | 1 0 1 1 1 1 0 1 | 1 0 0 1 0 0 1 0 |
| 00H | 1FH | 37H | BDH | 92H |
| 30H 30H | 31H 46H | 33H 37H | 42H 44H | 39H 32H |

Table 3.2: example of a transponder number

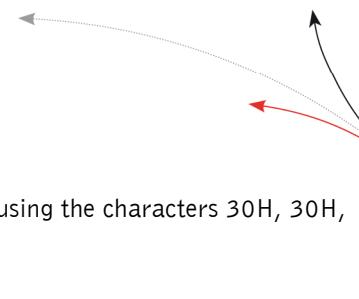

The transponder ID 001F37BD92 will be transmitted on the interface using the characters 30H, 30H, 31H, 46H, 33H, 37H, 42H, 44H, 39H, 32H and <CR>.

3.10.1 Output format for the NoRead information

An unsuccessful reading cycle is represented by the NoRead character sequence (see CN command in chapter 4.3). Normally the NoRead is coded by the number FFFFFFFF, which can never appear as transponder code.

Alternativly at the ARE K1 a NoRead information can be output using the error messages <NAK> #09 <CR>. For this the parameter value of CN has to be set to 2³.

3.10.2 Output of a reader number

For readers connected by a network the output of an individual reader identification is necessary, to assign a message with the belonging sender device. This identification can be made activating the RNR function (see chapter 4.14 - reader number). If the RNR function is active, each reader answer is preceded by a reader number and a space character as well (i.e 15 <SP>).

4 Command set specification

4.1 ALGO

Algo defines the type of chip used.

Input format: ALGO <SP> Parameter <CR>

| Parameter value | Function |
|-----------------|------------------|
| 1 | Trovan read only |
| 2 | PSK |


output (example): 1 <CR>

note: After correct parameter setting, Algo defines chip type used.

4.2 BD

The BD command enables the change of the baud rate.

³ not compatible down to ASB 1.0

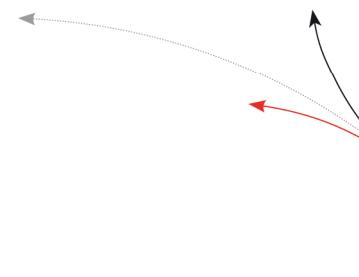

Input format: BD <SP> Parameter <CR>

| Parameter value | Function |
|----------------------|-------------------|
| 0 | 4800 baud |
| 1 | 9600 baud |
| <u>2⁴</u> | <u>19200 baud</u> |
| 3 | 38400 baud |

output (example): 2 <CR>

note: The settings are effective after a warm start using the RST command.

4.3 CID

With CID=1 only the first of in succession identical transponder numbers is output on the serial interface. The possibly following identical transponder numbers are suppressed, as long as no new valid transponder number is received, processed and output. NoReads do not influence the data filtering

input format: CID <SP> parameter <CR>

| Parameter | Function |
|-----------|------------------------------------|
| <u>0</u> | <u>no filter function</u> |
| 1 | suppression of repeatedly read IDs |

output (example): 0 <CR>

Example: A, B, C are specific different transponder numbers, N is NoRead:


| Sequence of reading cycles | Output sequence after filtering with CN=0 and CID=1 | Output sequence after filtering with CN=1 and CID=1 |
|---|---|---|
| N, N,, N, A, A, A,A, N, N, | N, N,, N, A, N, N, | A |
| N, N, N, A, A, A, N, A, A, B, A, C, C, C, | N, N, N, A, N, B, A, C, | A, B, A, C |
| N, N, B, B, B, B, B, N, N, N, B, B, B, B, N, N, ... | N, N, B, N, N, N, N, N, ... | B |
| N, N, N, B, B, B, B, B, N, B, B, B, B, N, N, N, ... | N, N, N, B, N, N, N, N, ... | B |

Table 4.1: example for the effect of the CID function

annotation: The internal reference number is cleared at the following conditions:

- after a cold start
- after a warm start

⁴ default values are underlined

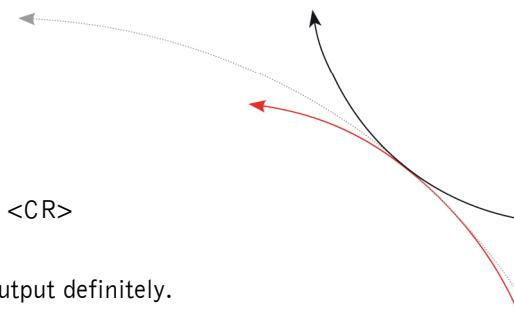

- after entering the command line CID <SP> 1 <CR>

This causes that the next transponder code is output definitely.

caution: The filter function CID picks up the results of the complete reading cycles, while the parameter NID proceeds from the results of single readings! The filter function CID has effect on the serial interface only. The digital output QR1 is not effected by CID.

4.4 CN

The CN parameter defines the type of NoRead output.

input format: CN <SP> parameter <CR>

| Parameter | Function |
|-----------|---|
| 0 | issue NoReads on serial interface using FFFFFFFF |
| 1 | suppress NoReads on serial interface |
| 2 | issue NoReads on serial interface using <NAK> #09 <CR> ⁵ |

output (example): 0 <CR>

4.5 DIAG


A self-diagnosis is executed. An antenna test is included.

input format: DIAG <CR>

function: A test of the antenna is executed . After this either the message <NAK> #99 <CR> (o.k.) is output on the interface or the message <NAK> #10 <CR> (antenna failure).

annotation: With an antenna failure the Error-LED is set.

⁵ parameter value 2 is not compatible down to ASB 1.0

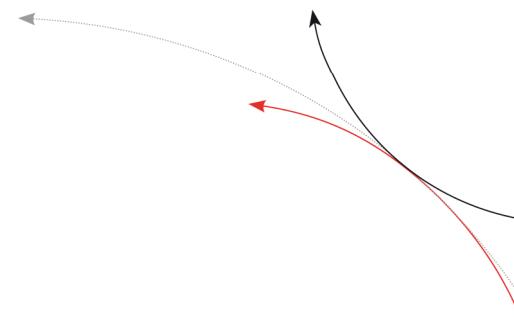

4.6 EC

The EC parameter changes of the echo function setting.

input format: EC <SP> parameter <CR>

| Parameter | Function |
|-----------|-----------------|
| 0 | echo on |
| <u>1</u> | <u>echo off</u> |

output (example): 0 <CR>

4.7 GT

The reading command code is GT. For details to this function see chapter 2.

input format: GT <CR>

output: Dependent of the parameter settings and the actual antenna input signal, three different responses are possible in operating mode 2:

- Transponder number, e.g. 001F37BD92 <CR>
- NoRead, e.g. FFFFFFFF <CR>
- <CR> as command acknowledge, if a filter function is active, which cut the transponder code or the NoRead result.

annotation: In mode 2 the GT command triggers a reading process.
 In mode 1 the GT command is effectiv too⁶.
 In mode 0 the GT command has no effect.

4.8 INIT

With INIT a warm start with default values is executed.

input format: INIT <CR>

output: Version number <CR> if EC=1, otherwise <CR> only

course:

⁶ not compatible down to ASB 1.0

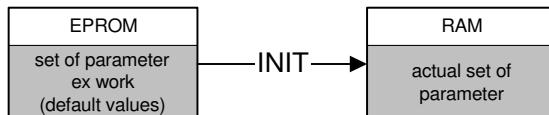


Figure 4.1: function of INIT

4.9 MD

The command MD changes the operating mode.

input format: MD <SP> parameter <CR>

| Parameter | Function |
|-----------|--------------------------------|
| 0 | continuous operation |
| 1 | externally triggered |
| 2 | triggered via serial interface |

output(example): 0 <CR>

4.10 NID

NID specifies the number of identical transponder numbers, which have to appear for the result "successful reading" within a reading cycle. In the setting NID = 1, two successive readings have to show the same transponder number.

input format: NID <SP> parameter <CR>

| Parameter | Function |
|-----------|----------------------------|
| 0 | one out of one (no effect) |
| <u>1</u> | <u>two out of two</u> |

output (example): 1 <CR>

| Sequence of readings | Length of the reading cycle | Result of the reading cycle |
|------------------------|-----------------------------|-----------------------------|
| NoRead | 1 reading | NoRead |
| 0000125ED1, 0000125ED1 | 2 readings | 0000125ED1 |
| 0000125ED1, 0000126ED1 | 2 readings | NoRead |

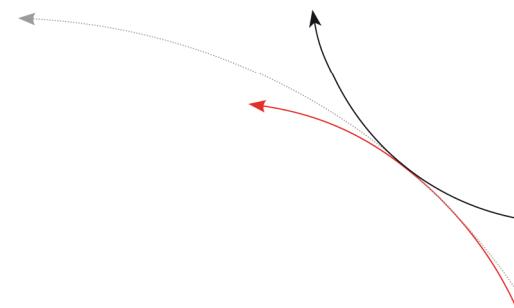


table 4.2: example for a reading cycle with NID=1

4.11 NRD

For improvement of the signal to noise ratio, a number of telegrams can be superimposed. The number of superimpositions is determined by the value NRD.

input format: NRD <SP> parameter <CR>

| Parameter | Function |
|-----------|--|
| 0 | no superimposition - evaluation of one telegram only |
| <u>1</u> | <u>superimposition of 2 telegrams</u> |
| 2 | superimposition of 4 telegrams |

output (example): 1 <CR>

4.12 QR1

The command QR1 changes the parameters of the digital port QR1.

input format: QR1 <SP> parameter <CR>

| Parameter | Function |
|-----------|--|
| 0 | port turned off |
| 1 | port turned on |
| <u>2</u> | <u>port controlled by previous reading process</u> |

output (example): 0 <CR>


4.13 QN1

The command QN1 changes the parameters for the digital port QN1.

input format: QN1 <SP> parameter <CR>

| Parameter | Function |
|-----------|--|
| 0 | port turned off |
| 1 | port turned on |
| <u>2</u> | <u>port controlled by previous reading process</u> |

output (example): 0 <CR>

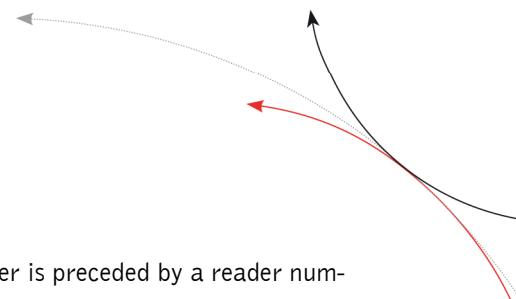

4.14 RNR

Setting RNR not to 0 activates the RNR function. Then each reader answer is preceded by a reader number and a space character as well (i.e. 15 <SP>).

input format: RNR <SP> parameter <CR>

| Parameter | Function |
|-----------|--|
| <u>0</u> | RNR function not active |
| 1 ... 9 | the one-digit reader number and <SP> is preceded to each reader answer |
| 10 ... 99 | the two-digit reader number and <SP> is preceded to each reader answer |

output (example): 99 <CR> after entering RNR 99 <CR>
NAK#02 <CR> after entering RNR 1A <CR>

4.15 RST

With RST a warm start is executed. All changed parameter values (i.e. BD) become effective. The relays and error LEDs are cleared.

input format: RST <CR>


output: Version number <CR> if EC=1, otherwise <CR> is output only

4.16 TOR

Timeout for the reader. TOR is used in operation mode 2 as maximum gating time for a reading process (see chapter 2.4). The length of the maximum gating time results from the equation $\text{gating_time} = \text{TOR} * \text{TB}$.

The time constant TB (Time Base) has always the default value 100ms.

input format: TOR <SP> parameter <CR>

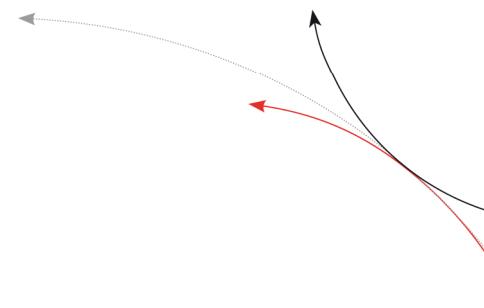

| Parameter ⁷ | Function |
|------------------------|--|
| 0 | limits the reading process duration to exactly one reading cycle |
| 1 | Tmax = 100ms |
| 2 | Tmax = 200ms |
| ... | |
| <u>5</u> | <u>Tmax = 500ms</u> |
| ... | |
| 255 | Tmax = 25,5s |

output (example): 2 <CR>, this means 200ms.

4.17 VER

The command VER outputs the software version of the reader. The software version is permanently stored in the program memory together with the firmware.

input format: VER <CR>

output: AEG <SP> ID <SP> - <SP> V1.4E <CR>

4.18 VS

The command VS lists all current parameter settings.

input format: VS <CR>

output (example): EC <SP> 0 <CR>

BD <SP> 2 <CR>

MD <SP> 2 <CR>

.....

4.19 VSAVE

All operating parameters temporarily stored are saved permanently using VSAVE.

input format: VSAVE <CR>

output: ok <CR> oder error message

course:

⁷ values > 9 are not compatible down to ASB 1.0


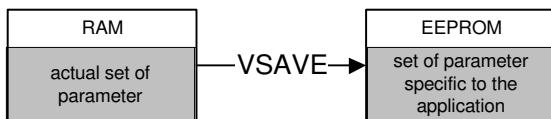


figure 4.2: function of VSAVE

function:

While storing the parameter values the EEPROM is tested by „write and verify“. On EEPROM-error the message <NAK> #03 <CR> is transmitted.

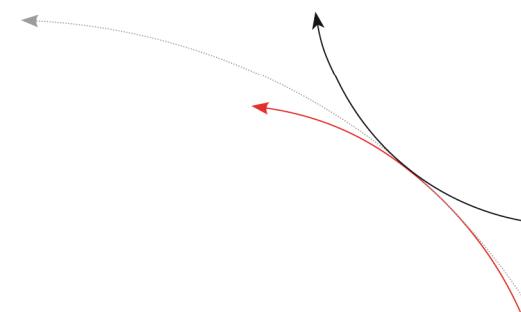

5 Description of hardware near functions

5.1 Cold start

After a cold start the system is initialized using the parameter values out of the EEPROM. The indicating elements (relays / LEDs) are cleared.

5.2 Interface to the master

The serial interface permits communication between the reader and a master (e.g. terminal or PC). The basic configuration of the interface is 19200baud and 8N1 (8 bit, no parity and 1 stop bit). With the command BD the reader can be set to a different baud rate. Changing the data format (8 data bits, no parity, 1 start- and stop bit) is not possible. The same applies to hardware-handshaking, e.g. Xon/Xoff or RTS/CTS.

5.3 Digital trigger input

For the operating mode 1 - externally triggered - a digital input channel is required. The following logical function is defined:

5.3.1 Logical level


If the digital input is open (not connected), then it is in the logical state zero (0). By feeding the defined input voltage the digital input has one-level (1).

5.3.2 Timing characteristics

When triggered externally, the first reading process is initiated by a change from 0 to 1 (leading edge) - see chapter 2.3.

5.4 Digital trigger outputs

Two specified digital outputs are defined as follows:

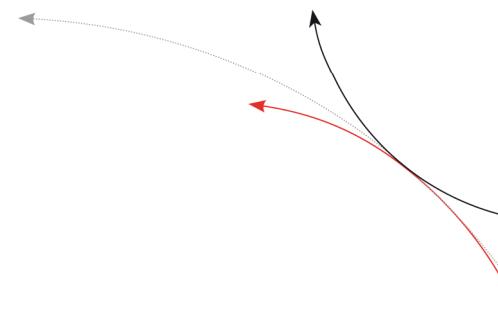

| Output | Function |
|--------|---|
| QR1 | trigger output - transponder read (QREAD) |
| QN1 | trigger output - NoRead (QNoREAD) |

Table 5.1: definition of the digital output channels

5.4.1 Logical level

At rest all digital outputs are logical 0. This means the rest contact is closed and the working contact is open.

5.4.2 Logical function

The logical function of the digital outputs is determined by the particular parameter setting.
If QR1 = 2 resp. QN1 = 2, the logical function is defined as follows:

After cold- and warm start all trigger outputs are set to logical zero. After processing the reading result, the corresponding output is set to logical 1 according to Table 5.1. If both trigger outputs QR1 and QN1 are set to parameter value 2, therefore only one of the trigger outputs can be at logical 1 at a time.

The result of each reading cycle is displayed at the corresponding digital output until the end of the next reading process.



The data filtering functions for the serial interface (e.g. CN - suppression of the NoRead output or CID) do not influence on the digital outputs.

5.5 Indicating elements (LEDs)

- LED1: on when antenna is operated
- LED2: on when last read was not successful
- LED3: on when last read was a success
- LED4: on as long as the digital input is high
- LED5: on when a hardware error was detected
- LED6: flashing as long as the reader is powered and the microprocessor is working properly
- LED7: on as long as commands were received on the RS 232 interface
- LED8: on as long as information is transmitted from the RS.232 interface
- LED9: not used

5.6 DIP-switches

In normal condition (ex work) all DIP-switches are set OFF (down).

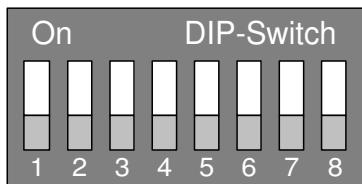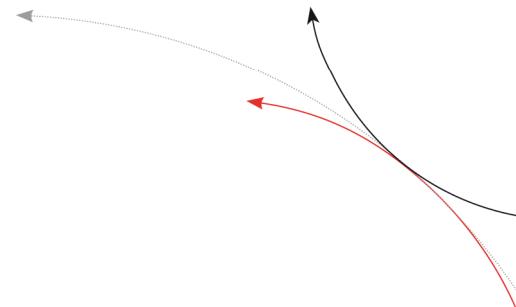

If switch 1 is in position ON, the default values (see chapter 3 - firmware) are loaded out of the EPROM at a cold start (when reader is put in operation).

DIP-switches 2 ... 8 have no function.

6 Appendix

6.1 Glossary

| | |
|------------------|---|
| Telegram: | Sequence of 64 data bits transferred from the transponder to the reader. |
| Superimposition: | Number of superimposed telegrams for an improved signal to noise ratio adjusted by the parameter NRD. |
| Reading: | Interval of several telegrams, whose number is fixed by NRD. The result of a reading is a transponder number or NoRead. In contrast to the reading process a reading does not appear at an external interface, that means the result is processed within the reading algorithm only. |
| NoRead: | If it is not possible to determine a transponder number (no header, wrong parity, ...), then the reader operates for the next internal operations with the transponder number FF FFFF FFFF (Hex) as NoRead information. |
| NID: | This parameter sets the number of readings with identical transponder number, which have to appear within one reading cycle for the result "successful reading cycle". |
| Reading cycle: | Interval of several readings. The maximum length of intervals is fixed by the values of NRD and NID. A reading cycle is successful if within the reading cycle the number of readings specified by NID yields the same result. |
| Reading process: | Interval of several readings. A reading process is started with occurrence of the trigger condition. The reading process is either terminated by occurrence of a successful reading cycle or through a break (time out, falling edge of the external trigger signal) ⁸ . At the end of a reading process appears always a result on the interface ⁹ . |

6.2 list of control characters

| Steuerzeichen | Hexcode | Bezeichnung | Funktion |
|---------------|---------|----------------------|---|
| SP | 20H | space character | separates commands from parameters |
| CR | 0DH | carriage return | terminates command line |
| NAK | 15H | negative acknowledge | error code |
| # | 23H | number sign | error number |
| DEL | 7FH | delete | change of operation mode after a cold start |

table 6.1: List of the control symbols used

⁸ In operating mode 0 is a reading process equal to a reading cycle.

⁹ The result will not appear when a data filter suppresses the result (e.g. NoRead suppression).

6.3 List of error messages

| error number | function | error-LED |
|--------------|------------------------------------|-----------|
| #00 | command code not known, wrong code | no |
| #01 | stack-error (under- / overflow) | no |
| #02 | parameter value not valid | no |
| #03 | error in EEPROM | no |
| #04 | function not supported | no |
| #05 | reserved | no |
| #06 | reserved | no |
| #07 | reserved | no |
| #08 | reserved | no |
| #09 | kein Code gelesen (NoRead) | no |
| #10 | antenna error | yes |
| #99 | system o.k. (DIAG state messages) | no |

Table 6.2: List of error messages


6.4 List of system commands

| command-code | function | action on interface | Compatibility with ASB1.0 |
|--------------|---------------------------------|------------------------|---------------------------|
| DIAG | diagnosis / state of the reader | state or error message | no |
| GT | read transponder (get tag) | transponder number | yes |
| INIT | load basic configuration | boot message / <CR> | yes |
| RST | warm start | boot message / <CR> | yes |
| VER | Output version number | version number | yes |
| VS | Output of all parameter values | List of parameters | yes |
| VSAVE | store current configuration | ok | yes |

Table 6.3: List of system commands

6.5 List of parameters and default values

| command-code | function | universally defined parameters (ASB 1.0) | valid parameter values for ARE K1 | default-values |
|--------------|---|--|-----------------------------------|----------------------------|
| MD | mode of operation | 0 .. 2 | 0 .. 2 | 2 (triggered by interface) |
| BD | baud rate | 0 .. 3 | 0 .. 3 | 2 (19200baud) |
| EC | echo | 0, 1 | 0, 1 | 0 (off) |
| CN | suppression of NoRead | 0, 1 | 0 .. 2 | 0 (output FFFFFFFF) |
| CID | filter function for multiply read IDs | 0, 1 | 0, 1 | 0 (filter off) |
| NID | number of identical IDs per reading cycle | 0, 1 | 0, 1 | 1 (two out of two) |
| NRD | superimposition of telegrams | 0 .. 2 | 0 .. 2 | 1 (two telegrams) |
| RNR | reader identification number | - | 0 .. 9, 10..99 | 0 (not active) |

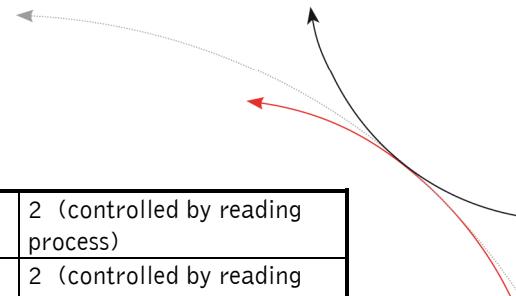

| | | | | |
|-----|---|--------|---------|-----------------------------------|
| QN1 | digital output QN1 | 0 .. 2 | 0 .. 2 | 2 (controlled by reading process) |
| QR1 | digital output QR1 | 0 .. 2 | 0 .. 2 | 2 (controlled by reading process) |
| TOR | timeout parameter for unsuccessfull reading | 0...9 | 0...255 | 5 (500ms) |

Table 6.4: List of parameters